

iVIEW Suite

Version 5.7

User Guide



NOTICE

© 2000-2008 RADVISION Ltd. All intellectual property rights in this publication are owned by RADVISION Ltd and are protected by United States copyright laws, other applicable copyright laws and international treaty provisions. RADVISION Ltd retains all rights not expressly granted.

This publication is RADVISION confidential. No part of this publication may be reproduced in any form whatsoever or used to make any derivative work without prior written approval by RADVISION Ltd.

No representation of warranties for fitness for any purpose other than what is specifically mentioned in this guide is made either by RADVISION Ltd or its agents.

RADVISION Ltd reserves the right to revise this publication and make changes without obligation to notify any person of such revisions or changes. RADVISION Ltd may make improvements or changes in the product(s) and/or the program(s) described in this documentation at any time.

If there is any software on removable media described in this publication, it is furnished under a license agreement included with the product as a separate document. If you are unable to locate a copy, please contact RADVISION Ltd and a copy will be provided to you.

Unless otherwise indicated, RADVISION registered trademarks are registered in the United States and other territories. All registered trademarks recognized.

GoAhead WebServer is used by permission from GoAhead Software, Inc. GoAhead WebServer is used by permission from GoAhead Software, Inc. Copyright © 2006 GoAhead Software, Inc. All Rights Reserved.

For further information contact RADVISION or your local distributor or reseller.

iVIEW Suite version 5.7, June 2008

Publication 3

<http://www.radvision.com>

CONTENTS

About This Manual

Related Documentation	vii
Feedback	vii

1 *Introducing iCM*

Logging in to iCM	1
Accessing In-meeting Control	1
User Types	2

2 *Scheduling Meetings in iCM*

Meeting Scheduling Workflow	4
Defining Meeting Properties	4
Scheduling a Virtual Room Meeting	7
Enabling Streaming for a Meeting	8
Enabling Recording for a Meeting	8
How to Invite Participants or Terminals to the Meeting	9
Searching for a Participant or Terminal	9
Selecting a Participant or Terminal	10
Adding a New Participant or Terminal	11
Reserving Extra Ports	11
How to Customize Participant and Terminal Settings	12
Selecting a Terminal for a Participant	12
Defining Participant Dialing Options	13
Viewing Participant or Terminal Addressing	14
Defining Participant Video Display Layout	14

Defining the Host of Your Meeting	15
Using Lecture Mode	16
Viewing Participant and Terminal Availability	17
Adding a Meeting Reference Code	17
Configuring a Billing Destination	18
Defining How to End a Meeting	19
Setting a Time Zone for a Meeting	20
How to Test and Complete the Scheduling	20
Testing the Meeting Scheduling Request	21
Scheduling the Meeting	21
Viewing a Summary of Your Meeting	22
Built-in Meeting Types	22
How to Create Ad Hoc Meetings	22
Creating Ad Hoc Point-to-Point Calls	23
Creating Ad Hoc Multipoint Meetings (Default Meeting Type)	24
Creating Ad Hoc Multipoint Meetings (Other Meeting Types)	24
Inviting Participants using MCU Delimiters	25
Creating Ad Hoc Virtual Room Meetings	25
Viewing Endpoint-Initiated Meetings	26
Creating Endpoint-Initiated Meetings with Embedded MCU	26
How to Manage Meetings via Video IVR	27
Accessing MCU Meetings via Video IVR	27
Viewing MCU Meetings via Video IVR	27
Creating a Meeting via Video IVR	28

3 *Managing Meetings in iCM*

Viewing Your Meetings	30
Viewing the Creation Status of Your Meetings	30
Searching for a Meeting	31
Monitoring a Meeting	32
Generating Reports	32
Responding to a Meeting Invitation	34
Modifying Upcoming Meetings	35
Deleting Your Meeting History	36

Defining the Duration of the Meeting History Display	36
--	----

4 *Moderating Meetings in iCM*

Taking Moderator Control	37
Accessing the In-meeting Control Interface	38
The In-meeting Control Interface	39
How to Moderate a Meeting	46
Connecting or Disconnecting Participants	47
Changing the Meeting View for a Participant	47
Inviting a Sub-conference	48
Extending Meeting Duration	48
Terminating a Meeting	49
Defining Video Layout and Display	49
Defining Video Output Schemes	49
Activating and Deactivating Auto-Switching	50
Displaying a Participant or Terminal Name	51
Setting a Voice-activated Frame	51
Enabling and Disabling Dynamic Layout	51
Changing Layout	52
Inviting Multiple Participants	52
Inviting Multiple Terminals	53
Viewing Participant Details	54
Changing a Participant Name	55
Muting or Enabling a Selected Microphone	55
Muting or Enabling a Selected Loudspeaker	55
Enabling a Selected Monitor	56
Blocking or Unblocking a Selected Camera	56
Enabling Data Collaboration	56
Removing a Participant from the Participant List	57

5 *Managing Your iCM Address Book*

How to Manage Your Personal Contacts List	59
Creating or Modifying a Personal Contact	59
Removing a Personal Contact	61
Searching for a Personal Contact	61

How to Manage Your Organization Contacts List	62
Viewing All Users in Your Organization	62
Searching for a Contact in Your Organization	62
Adding an Organization Contact to your Personal Address Book	63
How to Manage Contact Groups	63
Creating or Modifying a Group	63
Removing a Group	64
Searching for a Group	64

6 *Managing Your iCM User Profile*

Viewing Your User Profile Settings	66
Modifying Your Password	66
Modifying Your E-mail Address	66
Modifying Your Time Zone	67
Defining Your Meeting Display Preferences	67
Defining Your Virtual Room Preferences	68

<i>Index</i>	71
--------------	----

ABOUT THIS MANUAL

The [iVIEW Suite User Guide](#) provides information for users and meeting organizers about iVIEW Suite configuration and the user interface. It includes detailed procedures about performing end user-related tasks.

RELATED DOCUMENTATION

The iVIEW Suite documentation set is available on the RADVISION Utilities and Documentation CD-ROM supplied with the product and includes manuals and online helps. The manuals are in PDF format.

Note You require Adobe Acrobat Reader version 5.0 or later to open the PDF files. You can download Acrobat Reader free of charge from www.adobe.com.

FEEDBACK

The team at RADVISION constantly endeavors to provide accurate and informative documentation. If you have comments or suggestions regarding improvements to future publications, we would value your feedback.

Please send your comments to doc_comments@radvision.com.

We thank you for your contribution.

1

INTRODUCING ICM

- [Logging in to iCM](#) on page 1
- [Accessing In-meeting Control](#) on page 1
- [User Types](#) on page 2

LOGGING IN TO ICM



Procedure

- 1 Open your browser and enter the iCM URL.
- 2 Enter your user ID and password in the iCM login screen.
- 3 Check **Remember Login ID and Password** to use the user ID and password for the next login.
- 4 For SSO (Single Sign On) users, add the iVIEW Suite host server to the Internet Explorer trusted site list on the local machines belonging to your users.
SSO users can access the site without entering a login ID or password.
- 5 Click **Login**.

ACCESSING IN-MEETING CONTROL

You can access the In-meeting Control screen after signing in to the iVIEW Communications Manager web user interface.

Alternatively, you can enter a meeting directly without having to log in to the iVIEW Communications Manager.



Procedure

- 1 Click **Enter a Meeting** in the iCM login screen.
 - 2 Enter the ID of the desired meeting.
 - 3 Enter the meeting PIN, if there is one.
 - 4 Click **Login**.
-

USER TYPES

iCM enables you to log in as a Meeting Organizer or a Regular User.

Each user type has a default set of permissions and a default view of the user interface. [Table 1-1](#) outlines the differences between the default permissions for each user type.

Table 1-1 *iCM User Types and Default Permissions*

iCM Permissions	Meeting Organizer	Regular User
View scheduled meetings	✓	✓
Create endpoint-initiated ad hoc meetings	✓	✓
Schedule, modify and cancel meetings	✓	
In-meeting control	✓	✓
Manage personal address book	✓	
Modify own profile	✓	✓
Manage own virtual room	✓	

Note In-meeting control is PIN-protected. A user needs the Moderator PIN to perform in-meeting control operations.

2

SCHEDULING MEETINGS IN ICM

- [Meeting Scheduling Workflow](#) on page 4
- [Defining Meeting Properties](#) on page 4
- [Scheduling a Virtual Room Meeting](#) on page 7
- [Enabling Streaming for a Meeting](#) on page 8
- [Enabling Recording for a Meeting](#) on page 8
- [How to Invite Participants or Terminals to the Meeting](#) on page 9
- [How to Customize Participant and Terminal Settings](#) on page 12
- [Viewing Participant and Terminal Availability](#) on page 17
- [Adding a Meeting Reference Code](#) on page 17
- [Configuring a Billing Destination](#) on page 18
- [Defining How to End a Meeting](#) on page 19
- [Setting a Time Zone for a Meeting](#) on page 20
- [How to Test and Complete the Scheduling](#) on page 20
- [Built-in Meeting Types](#) on page 22
- [How to Create Ad Hoc Meetings](#) on page 22
- [How to Manage Meetings via Video IVR](#) on page 27

MEETING SCHEDULING WORKFLOW

To schedule a meeting you must configure each of the tabs in the Meeting Scheduling section. We recommend that you start with the Basic tab and then configure each of the remaining tabs in the order that they appear in the Meeting Scheduling user interface.

Table 2-1 Meeting Schedule Tabs (in order of appearance)

Tab	Description
Basic	Displays meeting information, such as the meeting type, and the date and time of the meeting, and whether or not the meeting is a recurring meeting.
Invite	Invite participants (both users and terminals) to the meeting. Can also reserve MCU ports for dial-in participants.
Attendees Settings	Displays the settings for meeting participants, such as dial-in/dial-out mode.
Attendees Availability	Displays a calendar with the availability of selected attendees.
Advanced	Displays advanced meeting options.

The Attendees Settings, Attendees Availability, and Advanced tabs are hidden by default and can be activated by the Administrator via Admin > Advanced Settings > Look and Feel.

DEFINING MEETING PROPERTIES



On the Basic tab, you name and define the new meeting.

Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
By default, the Basic tab displays and the start time is set to Now.
- 2 If working with Active Directory, your virtual room settings are displayed.
- 3 If the Meeting ID field displays, a random ID is generated for this meeting. You can edit the meeting ID.
If the Meeting ID field does not display, a random ID is generated for this meeting after it is successfully scheduled.

- 4 Click the calendar icon next to the Start Time field to specify the start time of the meeting.
Specify the exact date and time in the popup window. By default, the start time is Now.
If you specify a start time that is in the future, the End Time field displays. The End Time value is equal to the start time + the duration of the meeting.
You can change the meeting duration by overriding the value in the Duration field.
- 5 Enter a meeting subject.
A subject is required to schedule a meeting.
- 6 Select a meeting type.
 - ❑ Non Video Conference—Only users and meeting rooms are scheduled for a meeting. No terminals are involved.
 - ❑ Point to Point meeting type—Only two terminals are scheduled for a meeting and there is no use of MCU ports for the meeting. This feature is only available if advanced call control is enabled on the Enhanced Communication Server profile.
 - ❑ Audio Only—Forces the conference to be audio-only.
 - ❑ Desktop Video—Supports transcoding at bandwidth rates of up to 384 Kbps.
 - ❑ HD/SD Continuous Presence—Supports transcoding at bandwidth rates of up to 4096 Kbps. Supports high definition continuous presence. Supports image size of up to 720p. Default when adding a new service.
 - ❑ HD Switched Video—Supports switched high definition video at rates of up to 4096 Kbps.

Note Continuous Presence or Voice Activated meeting types are available only if a Sony endpoint with an embedded MCU is defined in the system. To host the meeting on the embedded MCU, you must be one of the meeting attendees and select a Sony endpoint with an embedded MCU.

Defining Meeting Properties

- 7** (Optional) Click **Recurrence** to define the recurrence details for a recurring meeting.

The Recurrence button is only enabled if the meeting start time is not **Now**.
- 8** (Optional) Define the meeting access PIN in the **Meeting PIN** field.

Only integers are allowed. This PIN allows you to join a PIN-protected meeting.
- 9** (Optional) Define the PIN that allows a user to perform moderation operations on a meeting in the **Moderator PIN** field.

Only integers are allowed. This PIN allows you to take control of a meeting from the In-meeting Control interface or from the endpoint using DTMF. Meeting Operators can access the In-meeting Control screen without using the Moderator PIN.
- 10** (Optional) If you entered a moderator PIN, you can turn on the waiting room functionality by checking **Place participants in a 'waiting room' until the moderator joins the meeting**.

Before the host joins the meeting, all connected participants are put into waiting room mode where they cannot hear or see one another. When the host terminal joins the meeting, the waiting room mode is removed and all participants can see and hear each other.

You can unlock the waiting room mode by taking control of the In-meeting Control screen after entering the moderator PIN and clicking **Unlock waiting room**.
- 11** (Optional) If you entered a moderator PIN, you may automatically record a meeting when it starts by selecting **Try to record meeting when meeting starts** (available only when a SCOPIA Desktop Server is configured in iVIEW Suite).
- 12** For SCOPIA Desktop meetings, you can specify whether the meeting will allow streaming by selecting the default streaming mode.

The default streaming mode determines the initial streaming state. Streaming can be disabled or enabled during the meeting by any SCOPIA Desktop Client that has meeting moderation rights.
- 13** (Optional) Enter a description of the scheduled meeting for future reference.

The Description field is hidden by default. If you cannot see this field, contact your system administrator.

- 14 Click **Resource Availability** to view the MCU resources available in the network for a particular meeting type.
The MCU resources are displayed with the number of available ports for a given time period of time.
 - 15 Perform one of the following:
 - ❑ Click **Next** to proceed with setting additional meeting scheduling options.
 - ❑ Click **Test** to test your scheduling request.
 - ❑ Click **Finish** to complete the meeting scheduling procedure.
-

Related Topics

- [Scheduling a Virtual Room Meeting](#) on page 7
- [Enabling Streaming for a Meeting](#) on page 8
- [Enabling Recording for a Meeting](#) on page 8
- [How to Test and Complete the Scheduling](#) on page 20
- [Scheduling the Meeting](#) on page 21
- [Moderating Meetings in iCM](#) on page 37.

SCHEDULING A VIRTUAL ROOM MEETING

The virtual room facility enables you to set predefined attributes, such as meeting type and PIN, to customize your meetings.

You associate an identifying number with each virtual room. Other users simply dial the virtual room number to establish a meeting using the customized attributes of the virtual room.

When scheduling a meeting in a virtual room, you use the predefined attributes of that virtual room as preferred settings for the meeting.



Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
 - 2 Click **My Virtual Room**.
 - 3 Select a virtual room from the list and click **OK**.
iCM loads the customized configurations of the virtual room.
 - 4 Click **Finish** to schedule a meeting in this virtual room.
-

ENABLING STREAMING FOR A MEETING



Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
 - 2 Set Streaming to Enabled.
 - 3 Perform one of the following:
 - Click **Next** to proceed with setting additional meeting scheduling options.
 - Click **Test** to test your scheduling request.
 - Click **Finish** to complete the meeting scheduling procedure.
-

ENABLING RECORDING FOR A MEETING



Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
 - 2 Select **Try to record meeting when meeting starts** to automatically record a meeting when the meeting starts.

This option is available if

 - Recording is allowed for the current user according to the recording policy.
 - The Record Meeting field is set to Enabled under Admin > Advanced Settings > Look and Feel.

The meeting will not be recorded if there are not enough available recording ports on the SCOPIA Desktop when the meeting is scheduled.
 - 3 Click **OK** to save your changes.
-

HOW TO INVITE PARTICIPANTS OR TERMINALS TO THE MEETING

- [Searching for a Participant or Terminal](#) on page 9
- [Selecting a Participant or Terminal](#) on page 10
- [Adding a New Participant or Terminal](#) on page 11
- [Reserving Extra Ports](#) on page 11

SEARCHING FOR A PARTICIPANT OR TERMINAL



Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
- 2 Click **Invite**.
- 3 Enter the partial or complete name of the participant or terminal in the Names field.
- 4 Select the source from which to search for resources or participants.
You can select Organization Groups, Address Book or All Terminals from the Select From drop-down list.
The Address Book option is displayed if the Personal address book option is enabled at Admin > Advanced Settings > Look and Feel and there are entries under your Address Book.
By default, either the Organization Groups or Terminals option is selected as determined at Admin > Advanced Settings > Look and Feel > Invite Attendees By.
- 5 Click **Search**.
Search results are listed.
- 6 To return to the complete list of participants, clear the Names field, and then click **Search**.
- 7 Use the arrow buttons to move entries between the Available Participants and Selected Participants lists.
- 8 If you do not want to set any additional information, perform one of the following:
 - Click **Next** to proceed with setting additional meeting scheduling options.
 - Click **Test** to test your scheduling request.

- Click **Finish** to complete the meeting scheduling procedure.
-

Related Topics

- [How to Test and Complete the Scheduling](#) on page 20
- [Scheduling the Meeting](#) on page 21

SELECTING A PARTICIPANT OR TERMINAL



Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
 - 2 Click **Invite**.
 - 3 Use the arrow buttons to move entries between the Available Participants and Selected Participants lists.
By default, each page displays up to 50 entries.
The Available Participants list includes users or terminals depending on the selection in the Select From list.
 - 4 By default, the meeting organizer is displayed in the Select Participant list. Disable this behavior at **My Profile > My Preferences > Don't include me in the meeting**.
 - 5 If you do not want to set any additional information, perform one of the following:
 - Click **Next** to proceed with setting additional meeting scheduling options.
 - Click **Test** to test your scheduling request.
 - Click **Finish** to complete the meeting scheduling procedure.
-

Related Topics

- [How to Test and Complete the Scheduling](#) on page 20
- [Scheduling the Meeting](#) on page 21

ADDING A NEW PARTICIPANT OR TERMINAL



Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
 - 2 Click **Invite**.
 - 3 Enter the required information about the participant or terminal in the lower half of the screen.
You must provide at least the e-mail address of the user or the number of the terminal that you want to add.
 - 4 Select **Save to my address book** to add the participant to your address book.
 - 5 Click **Add** to save your changes.
 - 6 If you do not want to set any additional information, perform one of the following:
 - Click **Next** to proceed with setting additional meeting scheduling options.
 - Click **Test** to test your scheduling request.
 - Click **Finish** to complete the meeting scheduling procedure.
-

Related Topics

- [How to Test and Complete the Scheduling](#) on page 20
- [Scheduling the Meeting](#) on page 21

RESERVING EXTRA PORTS



Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
- 2 Click **Invite**.
- 3 Select **Reserve additional ports** to reserve additional MCU ports for unknown participants.
- 4 Enter the required number of additional ports.

- 5 If you do not want to set any additional information, perform one of the following:
 - ❑ Click **Next** to proceed with setting additional meeting scheduling options.
 - ❑ Click **Test** to test your scheduling request.
 - ❑ Click **Finish** to complete the meeting scheduling procedure.
-

Related Topics

- [How to Test and Complete the Scheduling](#) on page 20
- [Scheduling the Meeting](#) on page 21
- [Selecting a Terminal for a Participant](#) on page 12
- [Defining Participant Dialing Options](#) on page 13
- [Viewing Participant or Terminal Addressing](#) on page 14
- [Defining Participant Video Display Layout](#) on page 14
- [Defining the Host of Your Meeting](#) on page 15
- [Using Lecture Mode](#) on page 16

HOW TO CUSTOMIZE PARTICIPANT AND TERMINAL SETTINGS

SELECTING A TERMINAL FOR A PARTICIPANT



This option is not available for non-video conferences.

Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
- 2 Click **Attendees Settings**.
If you do not see this tab, contact your system administrator.
- 3 To assign or change the assignment of a terminal used by an attendee, click the link for that attendee in the Terminal column.
- 4 Select a terminal from the list in the Select Terminal window or click **Specify custom terminal** to add an external number.
- 5 Enter the required terminal name, and then click **OK**.
- 6 For a PSTN/ISDN terminal designated as an ISDN connection for the meeting, select **PSTN/ISDN**.

This option is unavailable for non-PSTN/ISDN terminals.

- 7 If you do not want to set any additional information, perform one of the following:
 - ❑ Click **Next** to proceed with setting additional meeting scheduling options.
 - ❑ Click **Test** to test your scheduling request.
 - ❑ Click **Finish** to complete the meeting scheduling procedure.
-

Related Topics

- [How to Test and Complete the Scheduling](#) on page 20
- [Scheduling the Meeting](#) on page 21

DEFINING PARTICIPANT DIALING OPTIONS

This option is not available for non-video conferences.



Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
 - 2 Click **Attendees Settings**.
If you do not see this tab, contact your system administrator.
 - 3 Select **Dial-in** for dial-in attendees.
 - 4 If you expect a terminal to join the meeting by dialing in (rather than by being dialed to when the meeting starts), select **Dial-in** for the terminal.
If a PSTN/ISDN terminal is missing the country code, area code or phone number, the terminal is forced to join in dial-in mode only.
 - 5 If you do not want to set any additional information, perform one of the following:
 - ❑ Click **Next** to proceed with setting additional meeting scheduling options.
 - ❑ Click **Test** to test your scheduling request.
 - ❑ Click **Finish** to complete the meeting scheduling procedure.
-

Related Topics

- [How to Test and Complete the Scheduling](#) on page 20

- [Scheduling the Meeting](#) on page 21

VIEWING PARTICIPANT OR TERMINAL ADDRESSING



Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
- 2 Click **Attendees Settings**.

If you do not see this tab, contact your system administrator.

DEFINING PARTICIPANT VIDEO DISPLAY LAYOUT

This operation allows you to set the initial layout for terminals to which the MCU dials out. Make sure that there is no dynamic layout defined by the MCU service for this meeting type.

The layout of these terminals may change during the course of the meeting if additional terminals dial into the conference.

This option is not available for non-video conferences.



Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
- 2 Click **Attendees Settings**.
If you do not see this tab, contact your system administrator.
- 3 From the **View** list, select the layout that dial-out participants see.

You can view available layouts in the Layout display by clicking the numbered side-tabs.

The service selected for the meeting determines which layouts are available.

For a point-to-point conference, the attendees list should contain only two terminals, and the View column and Layout display are disabled.

- 4 To include a terminal name in a specific subframe of the screen layout at the start of the meeting, drag and drop the **Change Layout** icon (located to the right of the View column for each terminal) into the Layouts display.

- 5 If you do not want to set any additional information, perform one of the following:
 - Click **Next** to proceed with setting additional meeting scheduling options.
 - Click **Test** to test your scheduling request.
 - Click **Finish** to complete the meeting scheduling procedure.
-

Related Topics

- [How to Test and Complete the Scheduling](#) on page 20
- [Scheduling the Meeting](#) on page 21

DEFINING THE HOST OF YOUR MEETING



Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
 - 2 Click **Attendees Settings**.

If you do not see this tab, contact your system administrator.
 - 3 Select a host in the **Host** field at the bottom of the screen.

A host can be either a participant or a terminal.
If waiting room mode is enabled, and the host has a terminal, the host can unlock the waiting room on joining the meeting.
 - 4 If you do not want to set any additional information, perform one of the following:
 - Click **Next** to proceed with setting additional meeting scheduling options.
 - Click **Test** to test your scheduling request.
 - Click **Finish** to complete the meeting scheduling procedure.
-

Related Topics

- [How to Test and Complete the Scheduling](#) on page 20
- [Scheduling the Meeting](#) on page 21

USING LECTURE MODE

In Lecture Mode, the lecturer is displayed in one view and all other participants are displayed in the second view. The lecturer sees all the participants in the second view, while the participants see only the lecturer.



Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
 - 2 Click **Basic**.
 - 3 Enter a meeting ID and subject.
 - 4 Select a meeting type in which the Administrator has checked the Enable Lecture Mode option.

The host is designated as the lecturer and set to be displayed in the first view. All other participants are set to be displayed in the second view. The host sees all the participants. The participants see only the host.
 - 5 If you do not want to set any additional information, perform one of the following:
 - Click **Next** to proceed with setting additional meeting scheduling options.
 - Click **Test** to test your scheduling request.
 - Click **Finish** to complete the meeting scheduling procedure.
-

Related Topics

- [How to Test and Complete the Scheduling](#) on page 20
- [Scheduling the Meeting](#) on page 21

VIEWING PARTICIPANT AND TERMINAL AVAILABILITY



Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
- 2 Click **Attendees Availability**.

If you do not see this tab, contact your system administrator.

The legend at the top left of the window explains that T means “Terminal” and that U means “User”. In the case of a non-video conference, R means “Room”.

Purple represents “Busy” and white represents “Free”.

A one-week time period is displayed, beginning from the week that the meeting is scheduled to occur (no earlier than the present time).

- 3 Perform one of the following:
 - Click **Next** to proceed with setting additional meeting scheduling options.
 - Click **Test** to test your scheduling request.
 - Click **Finish** to complete the meeting scheduling procedure.
-

Related Topics

- [How to Test and Complete the Scheduling](#) on page 20
- [Scheduling the Meeting](#) on page 21

ADDING A MEETING REFERENCE CODE



Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
- 2 Click **Basic**.

Configuring a Billing Destination

- 3 Enter a reference code for the specified meeting in the **Reference Code** field.

This reference code is used to identify a meeting record if the record exists in the external system.

- 4 If you do not want to set any additional information, perform one of the following:
 - Click **Test** to test your scheduling request.
 - Click **Finish** to complete the meeting scheduling procedure.
-

Related Topics

- [How to Test and Complete the Scheduling](#) on page 20
- [Scheduling the Meeting](#) on page 21

CONFIGURING A BILLING DESTINATION



Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
 - 2 Click **Basic**.
 - 3 Select Host, All Participants or Organizer in the **Bill To** field.
The cost of the meeting is billed accordingly.
 - 4 If you do not want to set any additional information, perform one of the following:
 - Click **Test** to test your scheduling request.
 - Click **Finish** to complete the meeting scheduling procedure.
-

Related Topics

- [How to Test and Complete the Scheduling](#) on page 20
- [Scheduling the Meeting](#) on page 21

DEFINING HOW TO END A MEETING



Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
 - 2 Click **Advanced**.
If you do not see this tab, contact your system administrator.
 - 3 Select **At scheduled time** to terminate the meeting according to the termination time define for the meeting.
 - 4 Enter a value in the **Alert *n* minutes before termination** field to indicate the length of time before the scheduled termination of the meeting that terminals receive the end-of-meeting warning.
At the defined length of time before the end of the meeting, an audio alert message is played to the meeting participants. The only way to extend the meeting is to do it manually in the In-meeting Control interface.
 - 5 Select ***n* minutes after all terminals have left** to terminate the meeting only a defined period of time after the last terminal leaves.
iCM automatically extends the meeting as long as meeting participants are still connected to the meeting, and there is no resource conflict with upcoming scheduled meetings.
 - 6 Enter the required value in the ***n* minutes after all terminals have left** field.
By default, you cannot automatically extend iCM meetings to last more than four hours. If you need this default changed, contact your system administrator.
 - 7 If you do not want to set any additional information, perform one of the following:
 - Click **Test** to test your scheduling request.
 - Click **Finish** to complete the meeting scheduling procedure.
-

Related Topics

- [How to Test and Complete the Scheduling](#) on page 20
- [Scheduling the Meeting](#) on page 21

SETTING A TIME ZONE FOR A MEETING



By default, the meeting time zone is the time zone of the user stored in the system.

Procedure

- 1 Click **Meeting Scheduling** in the sidebar menu.
 - 2 Click **Advanced**.
If you do not see this tab, contact your system administrator.
 - 3 Select the required time zone from the list in the Time Zone field.
 - 4 If you do not want to set any additional information, perform one of the following:
 - Click **Test** to test your scheduling request.
 - Click **Finish** to complete the meeting scheduling procedure.
-

Related Topics

- [How to Test and Complete the Scheduling](#) on page 20
- [Scheduling the Meeting](#) on page 21

HOW TO TEST AND COMPLETE THE SCHEDULING

When you have completed all selections in the Meeting Scheduling screens, you can either test to see if the meeting scheduling request would be successful or schedule the meeting and receive the meeting invitation.

- [Testing the Meeting Scheduling Request](#) on page 21
- [Scheduling the Meeting](#) on page 21
- [Viewing a Summary of Your Meeting](#) on page 22

TESTING THE MEETING SCHEDULING REQUEST

This procedure describes how to test the scheduling request without actually scheduling the meeting.



Procedure

- 1 Click **Test** on any tab of the Meeting Scheduling section.
 - 2 If the scheduling request fails, the application suggests alternative time slots for this scheduling request to be successful. You can either select a new time slot or change the scheduling parameters and then re-test.
-

SCHEDULING THE MEETING

If all required resources are available, the meeting is automatically scheduled and notifications are sent to all participants.

If network resources are available but non-required resources (such as terminals, users and rooms) are not, the meeting is automatically scheduled, notifications are sent, and a conflict list is created for the meeting organizer.

The format in which iCM sends e-mail notifications depends on the type of meeting creator. If the meeting creator is a web user, the e-mail notification is in HTML format. If the meeting creator is a Microsoft Outlook user, the e-mail notification is a calendar invitation in ICAL format.



Procedure

- 1 Click **Finish** on any tab of the Meeting Scheduling section.
 - 2 If the meeting cannot be scheduled, a message appears in which you can choose an alternative time slot for the meeting, if a time slot is available.
 - 3 If no alternative time slot is available, click **Back** to return to the Meeting Scheduling screens where you can modify your selections.
-

VIEWING A SUMMARY OF YOUR MEETING



Procedure

- 1 Click **Finish** on any tab of the Meeting Scheduling section.
If the meeting is successfully scheduled, a Meeting Summary window displays the following information.
 - 2 Alternatively, go to My Meetings > Upcoming or My Meetings > History.
 - 3 Click the link to the meeting in the Subject column.
 - 4 Click **Meeting Summary**.
-

BUILT-IN MEETING TYPES

This section provides information about scheduling built-in meeting types.

- **Non Video Conference Meeting Type**—If you choose this meeting type, only users and meeting rooms are scheduled for a meeting. No terminals are involved.
- **Point to Point Meeting Type**—If you choose this meeting type, only two terminals are scheduled for a meeting and there is no use of MCU ports for the meeting. This feature is only available if advanced call control is enabled on the Enhanced Communication Server profile.
- **Continuous Presence or Voice Activated Meeting Types**—These meeting types are available only if a Sony endpoint with an embedded MCU is defined in the system. To host the meeting on the embedded MCU, you must be one of the meeting attendees and select a Sony endpoint with an embedded MCU.

HOW TO CREATE AD HOC MEETINGS

You create an ad hoc meeting when you dial a random meeting ID from your endpoint or terminal without scheduling a meeting or a virtual room number. The system creates this random ad hoc meeting or virtual room meeting for you. When all participants leave the ad hoc meeting or the virtual room, it is terminated.

When you create an ad hoc meeting, iCM reserves at least 30 minutes of resources for this meeting. The default length of an ad hoc meeting is controlled by the **Duration of Endpoint Initiated Calls n minutes** option in the iCM Configuration Tool at **System Configuration > Scheduling Settings**.

If all participants leave the meeting within 30 minutes, the meeting terminates automatically.

If all participants stay in the meeting after 30 minutes, the meeting is auto-extended until all participants leave the meeting or there is a resource conflict.

- [Creating Ad Hoc Point-to-Point Calls](#) on page 23
- [Creating Ad Hoc Multipoint Meetings \(Default Meeting Type\)](#) on page 24
- [Creating Ad Hoc Multipoint Meetings \(Other Meeting Types\)](#) on page 24
- [Inviting Participants using MCU Delimiters](#) on page 25
- [Creating Ad Hoc Virtual Room Meetings](#) on page 25
- [Viewing Endpoint-Initiated Meetings](#) on page 26
- [Creating Endpoint-Initiated Meetings with Embedded MCU](#) on page 26

Note An endpoint-initiated meeting is only allowed if the administrator has enabled this meeting type. If you cannot initiate an ad hoc meeting, contact your system administrator.

CREATING AD HOC POINT-TO-POINT CALLS



Procedure

- 1 From your endpoint or terminal, dial the number of the endpoint or terminal you want to reach.
 - 2 If you cannot initiate an ad hoc meeting, contact your system administrator to verify the following:
 - Your endpoint or terminal is registered to a gatekeeper managed by iCM.
 - The endpoint or terminal you want to reach is registered to a gatekeeper managed by iCM.
 - iCM is configured to allow endpoint-initiated point-to-point calls.
-

CREATING AD HOC MULTIPOINT MEETINGS (DEFAULT MEETING TYPE)



Procedure

- 1 Dial a meeting ID number that begins with the iCM meeting ID prefix (by default, 6).
For example, 6789.
iCM then uses the default meeting type to initiate the meeting.
For example, if the default meeting type is 85, other users can join the conference by dialing either 856789 or 6789.
 - 2 If you cannot initiate an ad hoc meeting, contact your system administrator to verify the following:
 - Your endpoint or terminal is registered to a gatekeeper managed by iCM.
 - iCM is configured to allow endpoint-initiated multipoint calls.
-

CREATING AD HOC MULTIPOINT MEETINGS (OTHER MEETING TYPES)



Procedure

- 1 Dial the meeting type prefix followed by a meeting ID number.
For example 856789 where 85 is the meeting type prefix and 6789 is the meeting ID number.
Other users can join the conference by dialing either 856789 or 6789.
 - 2 If you cannot initiate an ad hoc meeting, contact your system administrator to verify the following:
 - Your endpoint or terminal is registered to a gatekeeper managed by iCM.
 - iCM is configured to allow endpoint-initiated multipoint calls.
-

INVITING PARTICIPANTS USING MCU DELIMITERS



By default, ** is the MCU delimiter for inviting an endpoint to a meeting, and *** is the MCU delimiter for the meeting password.

Procedure

- 1 Dial the following in a single string:
 - The meeting type prefix followed by a meeting ID number.
 - **
 - The number of the endpoint or terminal you want to invite.
 - ***
 - The meeting password.

For example, 856789**5656***1111.
 - 2 If you cannot initiate an ad hoc meeting, contact your system administrator to verify the following:
 - Your endpoint or terminal is registered to a gatekeeper managed by iCM.
 - iCM is configured to allow endpoint-initiated multipoint calls.
 - The MCU is configured to use default delimiter settings.
-

CREATING AD HOC VIRTUAL ROOM MEETINGS



Depending on your system configuration, you might be limited to ad hoc virtual meetings.

You can create an ad hoc virtual room meeting as follows:

Procedure

- 1 Access a terminal.
- 2 Dial a virtual room number.

For example, a user defines a virtual room with number 6555 and meeting password 1234.

When 6555 is dialed from an endpoint, a virtual room meeting begins. The meeting ID is 6555, and anyone wanting to join the conference must enter the password 1234.

VIEWING ENDPOINT-INITIATED MEETINGS



Procedure

- 1 Verify with your system administrator that iCM is configured to display endpoint-initiated calls.
- 2 Click **My Meetings** in the sidebar menu.
- 3 Click **Current**.
- 4 Alternatively, you can view the In-meeting Control interface of an endpoint-initiated meeting from the iVIEW Communications Manager login screen.

Click **Enter a meeting** and type the meeting ID and PIN to access that meeting.

CREATING ENDPOINT-INITIATED MEETINGS WITH EMBEDDED MCU



Procedure

- 1 Access the web interface of the Sony endpoint.
 - 2 In the **Dial/Disconnect** section, select **Multipoint** in the **Line I/F** field to create a multipoint conference.
-

HOW TO MANAGE MEETINGS VIA VIDEO IVR

- [Accessing MCU Meetings via Video IVR](#) on page 27
- [Viewing MCU Meetings via Video IVR](#) on page 27
- [Creating a Meeting via Video IVR](#) on page 28

ACCESSING MCU MEETINGS VIA VIDEO IVR



Procedure

- 1 Ask your administrator for the auto attendance session number for the MCU service you wish to use.
 - 2 Dial the auto attendance session number from your endpoint to access the video IVR session.
 - 3 Alternatively, you can dial your gatekeeper IP address to gain access to the video IVR session.
-

VIEWING MCU MEETINGS VIA VIDEO IVR



Procedure

You can view a list of current MCU meetings via the video IVR only if your administrator has selected the Admin > Advanced Settings > Default User Settings > Display all meeting records on My Meeting screen option.

- 1 Access the video IVR as described in the [Accessing MCU Meetings via Video IVR](#) section on page 27.
 - 2 Use the * or # keys to browse the meeting list page by page.
 - 3 Enter the meeting ID to access that meeting.
-

CREATING A MEETING VIA VIDEO IVR



Procedure

- 1 Access the video IVR as described in the [Accessing MCU Meetings via Video IVR](#) section on page 27.
 - 2 Press 0.
 - 3 If the auto attendance session number is currently being used by a meeting, you will join this meeting.
If the auto attendance number is not in use, you can create a new meeting using this meeting ID.
 - 4 Enter a PIN for your new meeting.
Participants must use this PIN to join your meeting.
-

3

MANAGING MEETINGS IN ICM

- [Viewing Your Meetings](#) on page 30
- [Viewing the Creation Status of Your Meetings](#) on page 30
- [Searching for a Meeting](#) on page 31
- [Monitoring a Meeting](#) on page 32
- [Generating Reports](#) on page 32
- [Responding to a Meeting Invitation](#) on page 34
- [Modifying Upcoming Meetings](#) on page 35
- [Deleting Your Meeting History](#) on page 36
- [Defining the Duration of the Meeting History Display](#) on page 36

VIEWING YOUR MEETINGS



Procedure

- 1 Click **My Meetings** in the sidebar menu.
- 2 Click **Current** to see all your meetings that are currently in progress.
- 3 Click **Upcoming** to see all your meetings that have not yet started.
- 4 Click **History** to see all your meetings that have already finished.

Only meetings that meet at least one of the following criteria are displayed:

- You are a participant in the meeting.
- You are the owner of a virtual room used in the meeting.
- You are the organizer of the meeting.

If you do not get the expected result when you click History, contact your system administrator.

VIEWING THE CREATION STATUS OF YOUR MEETINGS



Procedure

- 1 Click **My Meetings** in the sidebar menu.
- 2 Click **Current** to see all your meetings that are currently in progress.
- 3 Click **Upcoming** to see all your meetings that have not yet started.
- 4 Click **History** to see all your meetings that have already finished.

The creation status of each of the displayed meetings is shown in the Status column.

If the status column is colored green, the meeting was successfully created and all meeting participants are in the meeting.

If the status column is colored red, iCM has failed to create the meeting.

- 5 To view the Reason Failed error message, click the **red status indicator**, and then click **Retry** to resend the meeting information to the MCU.
-

SEARCHING FOR A MEETING



Procedure

- 1 Click **My Meetings** in the sidebar menu.
 - 2 Click **Current**, **Upcoming** or **History**, as required.
 - 3 Perform any of the following:
 - Enter the partial or complete subject of the meeting in the **Subject** field.
If any part of the meeting subject matches the search string, the meeting record is displayed in the search results.
 - Enter the E.164 number of an attending terminal in the **E164** field.
If any part of the meeting subject matches the search string, the meeting record is displayed in the search results.
 - Click the calendar icon in the From field, and select a date and time in the window that opens.
Meetings scheduled after the selected time are listed.
 - Click the calendar icon in the To field, and select a date and time in the window that opens.
Meetings scheduled before the selected time are listed.
 - Enter the partial or complete meeting ID in the **Meeting ID** field.
If any part of the meeting ID matches the search string, the meeting record is displayed in the search results.
 - 4 Click **Search**.
Search results are listed.
 - 5 To return to the complete list of meetings, clear each of the fields.
 - 6 Click **Search**.
-

MONITORING A MEETING



You can monitor and moderate a meeting in which you are a participant or the organizer via the In-Meeting Control interface for the meeting.

Procedure

- 1 Click **My Meetings** in the sidebar menu.
- 2 Click **Current**.
- 3 Click the link in the **Subject** field for the meeting you want to monitor.
- 4 Enter the moderator PIN if one is used for this meeting.
- 5 Click the Take Control icon.

The In-meeting Control interface is not available for meetings in which you are not a participant or the organizer.

Related Topics

- [Moderating Meetings in iCM](#) on page 37.

GENERATING REPORTS



On the Upcoming and History tabs, you can generate a report in .csv format which shows all meetings scheduled between selected dates (as specified in the To and From fields). Once you have saved a report, you can view it with Microsoft Excel.

Procedure

- 1 Click **My Meetings** in the sidebar menu.
- 2 Click **Upcoming** or **History**, as required.
- 3 Click the calendar icon in the From and To fields to choose a start and end date for information in the generated report.
- 4 Click **Generate Report**.

[Table 3-1](#) describes the information categories that are included in a generated report.

Table 3-1 *Generated Report Information Categories*

Category	Description
Virtual Meeting ID	Dialable meeting ID used by users to access a specific meeting.
Master Meeting ID	Corresponds to a physical meeting ID on the master MCU.
Slave Meeting ID	Corresponds to a physical meeting ID on the slave MCU.
RADVISION iVIEW Suite Meeting ID	Internal database ID for the meeting.
Subject	Corresponds to Subject field in Meeting Scheduling.
Meeting Type	Corresponds to the Meeting Type field in Meeting Scheduling. The name of the meeting type is displayed.
Reference Code	Corresponds to the Reference Code field in Meeting Scheduling.
Start Time	Corresponds to the Start Time field in Meeting Scheduling.
Duration	Corresponds to the Duration field in the Meeting Scheduling.
Meeting Room	Meeting room used for scheduling a meeting.
Organizer Name	Corresponds to the Organizer field in Meeting Scheduling.
Service Prefix	MCU service prefix used for the meeting.
Services	MCU service used for the meeting.
MCU Name(s)	MCU(s) used for the meeting. For cascaded meetings, “(master)” appears after the MCU name.
Terminals	Number of terminals used for the meeting.
Number of Extra IP Ports Reserved	Corresponds to the Reserve additional ports field in Meeting Scheduling.

Table 3-1 *Generated Report Information Categories (continued)*

Category	Description
Dial-in IP Terminals	Number of dial-in IP terminals.
Dial-out IP Terminals	Number of dial-out IP terminals.
Dial-in ISDN Terminals	Number of dial-in PSTN/ISDN terminals.
Dial-out ISDN Terminals	Number of dial-out PSTN/ISDN terminals.
Gateway List	Gateways used for the meeting.
Device Failure Cause (Device Name, IP Failure, Cause)	Any failure on a network device such as an MCU or gateway.
Attendee Failure Cause (Name, Number, ISDN, Dial-in, Total Time, Failing Attempts, Last Failure Cause)	Any failures on attending terminals.

5 Click **Save** to save the report to a location of your choice.

RESPONDING TO A MEETING INVITATION



Procedure

- 1** Click **My Meetings** in the sidebar menu.
- 2** Click **Upcoming**.
- 3** A red flag next to the subject of an upcoming meeting indicates that you have not responded to a meeting invitation sent by the meeting organizer. The mechanism is similar to Outlook Scheduling.
If you see a red flag, click the subject link to open the meeting details.
- 4** Click **Accept** to accept the meeting.
The red flag is removed.

- 5 Click **Tentative** to tentatively accept the meeting.

You can enter a message in your meeting invitation response.

An e-mail response is sent to the meeting organizer containing your response.

The red flag is still displayed next to the meeting entry in the My Meetings screen.

- 6 Click **Decline** to decline the meeting.

You can enter a message in your meeting invitation response.

An e-mail response is sent to the meeting organizer containing your response.

The meeting can no longer be accessed from the My Meetings screen.

The meeting organizer can view the meeting summary screen.

The meeting organizer can check the attendees list to see who will attend the meeting.

Attendees who decline the meeting invitation are automatically removed from the meeting summary screen.

MODIFYING UPCOMING MEETINGS

You can reschedule the meeting to another time, change the meeting parameters, or delete the meeting request.

For more information about specific fields, see the [Scheduling Meetings in iCM](#) chapter.



Procedure

- 1 Click **My Meetings** in the sidebar menu.
 - 2 Click **Upcoming**.
 - 3 Click the subject of the meeting you want to modify in the In-meeting Control interface.
The In-meeting Control interface is not available for meetings in which you are not a participant or the organizer.
 - 4 Enter the required information.
-

DELETING YOUR MEETING HISTORY



All past meetings are deleted from the History tab.
Deleted meetings appear in billing and reporting statements.
History tab search results do not include deleted meetings.

Procedure

- 1 Click **My Meetings** in the sidebar menu.
 - 2 Click **History**.
 - 3 Click **Delete History**.
-

DEFINING THE DURATION OF THE MEETING HISTORY DISPLAY



Procedure

- 1 Click **My Profile** in the sidebar menu.
 - 2 Click **My Preferences**.
 - 3 Check **Delete meeting history items older than n days** and enter the required number of days.
-

4

MODERATING MEETINGS IN ICM

TAKING MODERATOR CONTROL

- [Taking Moderator Control](#) on page 37
- [Accessing the In-meeting Control Interface](#) on page 38
- [The In-meeting Control Interface](#) on page 39
- [How to Moderate a Meeting](#) on page 46

Meeting moderators have permission to perform the following actions:

- Invite participants
- Modify participant media connections
- Manually reposition participant images in a video layout
- Modify meeting view layouts
- Specify the position of a voice-activated image in the meeting view
- Create sub-conferences
- View additional participant details



Procedure

- 1 Access the In-meeting Control interface.
(Meeting Operators) If no other user has control of the meeting at the same time, you are automatically granted Moderator control rights.
 - 2 (Meeting Organizers and regular users) Enter the moderator PIN if one is used for this meeting.
 - 3 Click the Take Control icon.
-

ACCESSING THE IN-MEETING CONTROL INTERFACE

You moderate the status of a live meeting in real-time from the In-meeting Control interface. Access the In-meeting Control interface in any of the following ways.



Procedure

- 1 Access the In-meeting Control interface via a user account.
If the meeting you want to control is listed at My Meetings > Current, and if you are the meeting organizer or an attendee of the meeting, click the meeting subject link.
 - 2 Access the In-meeting Control interface via a conference ID.
 - When the meeting is in progress, click the URL link embedded in the meeting notification e-mail.
 - or–
 - Click **Enter a Meeting** in the iCM login screen and enter the meeting ID and PIN to access the In-meeting Control screen.
-

THE IN-MEETING CONTROL INTERFACE

The In-meeting Control interface contains the following components:

- Title bar—Positioned on the upper left-hand corner of the In-meeting Control screen, the title bar includes essential meeting information. Meeting control buttons are also available on the title bar for users with chair-control privileges. For more information, see [Table 4-1](#) on page 39.
- Participant List tab—Enables you to view all meeting attendees and information about them. For more information, see [Table 4-2](#) on page 42.
- Statistics tab—Enables you to view statistical information for all meeting attendees. This information in Statistics complements the information on the Participant List by providing additional attendee data. For more information, see [Table 4-3](#) on page 44.
- Advanced Invitation tab—For users with chair-control privileges. Invite multiple predefined users or terminals to the meeting from this tab.
- Layout panel—Positioned in the upper-right hand corner of the In-meeting Control window, the Layout panel displays layout information related to meeting attendees, such as the position of each attendee in all available views. For users with chair-control privileges, layout control buttons are also available. For more information, see [Table 4-4](#) on page 45.
- Invite panel—Positioned below the Layout panel. For users with chair-control rights. You can invite additional attendees to the current meeting. For more information, see [Table 4-5](#) on page 46.

Table 4-1 *Title Bar Details*

Element Name	Sub-Element Name	Graphic/ Link	Requirements	Description
Meeting ID				The meeting ID attendees dial to join the meeting
Meeting Name				Name of the meeting

The In-meeting Control Interface

Table 4-1 Title Bar Details (continued)


 





 
Element Name	Sub-Element Name	Graphic/ Link	Requirements	Description
Presentation				Indicates whether or not the conference is audio, video or data sharing via T.120
	Audio			
	Video			
	Data Sharing via T.120			
	H.239 Duo Streaming enabled			
MCU Conference				The corresponding MCU conference ID and the host MCU in the format Meeting:MCU_Conference_Id@Host_MCU_Name
Bandwidth				Bandwidth of the MCU service used to create the meeting
Time Remaining				The length of time remaining for the meeting
Take Control				Click this button to take control of the meeting. Only one user can have control of a meeting at any one time
Help				Click this button to open the online help

Table 4-1 Title Bar Details (continued)

Element Name	Sub-Element Name	Graphic/ Link	Requirements	Description
Refresh				Click this button to manually refresh the In-meeting Control window Note The In-meeting Control window is automatically refreshed at regular intervals
Mute			Moderator control privileges	Mutes or un-mutes all meeting attendees
Terminate Meeting			Moderator control privileges	Terminates the meeting
Block Entry			Moderator control privileges	Prevents attendees from joining the conference via dial-in or dial-out
Reconnect All			Moderator control privileges	Dials out to all attendees to reconnect them
Delete Participant			Moderator control privileges	Choose participants from Main Panel > Participant List, and then click this button to remove the chosen participants from the meeting.
Subconference			Moderator control privileges	Choose participants from Main Panel > Participant List, and then click this button to move the chosen participants to a sub-conference within the meeting.
Change View			Moderator control privileges	Choose participants from the Main Panel > Participant List, and then click this button to place them in one of the meeting's available views.

The In-meeting Control Interface

Table 4-1 Title Bar Details (continued)




Element Name	Sub-Element Name	Graphic/ Link	Requirements	Description
Extend Meeting			Moderator control privileges	Click this button to extend the duration of the current meeting.
Enable/Disable QualiVision			Moderator control privileges	Click to enable or disable the RADVISION QualiVision feature for improved video quality.
Hierarchy			Moderator control privileges, cascaded meeting	Displays the participant list either in a tree view or table view.

Table 4-2 Participant List Tab Details











Element Name	Graphic/ Link	Requirements	Description
Connect/ Disconnect		Moderator control privileges	If a participant is connected, click this button to disconnect that participant. If a participant is disconnected, click this button to connect that participant.
Change Participant Name		Moderator control privileges	Located in the Participant Name column. Click this button to change the participant name in the conference and/or on terminals.
Name column			Column displays the names of the users and/or terminals attending the meeting.
Active Speaker			Indicates the user who is currently speaking in the meeting.
Number column			This column displays the number of the participating terminal.
Dial-in column			Indicates whether or not each participant dialed into the meeting.

Table 4-2 Participant List Tab Details (continued)

Element Name	Graphic/ Link	Requirements	Description
Actual Speed column			Displays the connection speed (in/out) of each participant in Kbps.
Sub-conf column			Indicates if a participant is part of a sub-conference of the meeting. This is only displayed for connected participants. For cascaded MCU conferences, only terminals in the master MCU conference have this field enabled.
Meeting View column			Indicates which view is currently displayed to each participant. This is only displayed for connected participants. For cascaded MCU conferences, only terminals in the master MCU conference have this field enabled.
Microphone Status			Click to adjust or mute the volume of a participant's audio output. This is only displayed for connected participants.
Loudspeaker Status			Indicates whether or not a participant is receiving audio. This is only displayed for connected participants.
Monitor Status			Indicates whether or not a participant is receiving video. This is only displayed for connected participants.
Camera Status			Click to enable or disable the video input of a participant. This is only displayed for connected participants.
Camera Status		Duo-streaming enabled	Click to enable or disable the video inputs of a participant. This icon appears instead of the Camera Status icon above if Duo-stream is enabled. This is only displayed for connected participants.
Participant Information column			Displays detailed call-related information of a meeting participant.

The In-meeting Control Interface

Table 4-2 Participant List Tab Details (continued)

Element Name	Graphic/ Link	Requirements	Description
Tabular View			Only participating terminals are displayed in this view in a tabular format.
Tree View			In this view, participants are grouped according to the MCU to which they are connected. For each conference on the MCU, a header is displayed that indicates the group to which participants belong. Click the header to view the conference on the MCU.

Table 4-3 Statistics Tab Details

Column Heading	Description of Column Contents
Name	Name of each participant
Number	Number of each participating terminal
Actual Speed	Connection speed of each participant in Kbps
IP Address	IP address of each participant
Type	User type of each participant
Connect Time	The time that each participant connects to the meeting
Video In/Out	The codec used for video input video output
Audio In/Out	The codec used for audio input and audio output
Data	Indicates if there is data sharing
VFU Req. In/Out	Video Fast Update Request input and output
Video Out of Order Packets In/Out	Indicates if there are Video Out of Order packets
Video Lost Packets In/Out	Indicates if there is a lost video packet
Audio Out of Order Packets In/Out	Indicates if there are Audio Out of Order packets
Audio Lost Packets In/Out	Indicates if there are Audio Lost packets

Table 4-4 *Layout Panel Details*









Element Name	Graphic	Requirements	Description
Layout Box			The layout displayed in the layout box is what the participant sees.
View tabs			Click a tab to display an available view. You can switch between views.
Video Output Stream		Moderator control privilege	Click to choose the bandwidth for each view. This is only available for MCU version 4.
Auto Switch		Moderator control privilege	Click to choose this layout mode that automatically switches participants at regular intervals.
Active Speaker		Moderator control privilege	Drag and drop the icon into a subframe in the Layout Box, to display the speaker in that subframe.
Text Overlay		Moderator control privilege	Click to enable the display of the terminal name as a text overlay displayed on a participating terminal.
No Self-See		Moderator control privilege	Click to toggle the self-see function.
Dynamic Layout		Moderator control privilege	Click to enable/disable dynamic layout. If dynamic layout is disabled, you can select a custom layout for the meeting by clicking Change Layout.
Change Layout		Moderator control privilege, dynamic layout must be disabled.	Click this icon to open a window containing all available layouts. Select one of the available layouts and it will be applied to the current layout displayed in the Layout panel.

Table 4-5 *Invite Panel Details*

Area	Description
Participant	Displays the number of participants currently connected to the meeting.
Reserved/Max	Displays the number of reserved ports for guest participants.
Invite	In this area, you can invite an IP/ISDN/Mobile participant to the meeting.

HOW TO MODERATE A MEETING

Moderators can control a meeting with various functions from the In-meeting Control interface.

- [Connecting or Disconnecting Participants](#) on page 47
- [Changing the Meeting View for a Participant](#) on page 47
- [Inviting a Sub-conference](#) on page 48
- [Extending Meeting Duration](#) on page 48
- [Terminating a Meeting](#) on page 49
- [Defining Video Layout and Display](#) on page 49
- [Defining Video Output Schemes](#) on page 49
- [Activating and Deactivating Auto-Switching](#) on page 50
- [Displaying a Participant or Terminal Name](#) on page 51
- [Setting a Voice-activated Frame](#) on page 51
- [Enabling and Disabling Dynamic Layout](#) on page 51
- [Changing Layout](#) on page 52
- [Inviting Multiple Participants](#) on page 52
- [Inviting Multiple Terminals](#) on page 53
- [Viewing Participant Details](#) on page 54
- [Changing a Participant Name](#) on page 55
- [Muting or Enabling a Selected Microphone](#) on page 55
- [Muting or Enabling a Selected Loudspeaker](#) on page 55
- [Enabling a Selected Monitor](#) on page 56
- [Blocking or Unblocking a Selected Camera](#) on page 56
- [Enabling Data Collaboration](#) on page 56
- [Removing a Participant from the Participant List](#) on page 57

CONNECTING OR DISCONNECTING PARTICIPANTS



The Connect/Disconnect button toggles between its two functions. To connect or disconnect a participant, use the relevant procedure:

Procedure

- 1 If a participant in the Participant List tab is listed as disconnected, click **Connect** to dial out to the terminal of that participant.
- 2 If a participant in the Participant List tab is listed as connected, click **Disconnect** to disconnect the terminal of that participant.
- 3 Click **Reconnect All** on the title bar to reconnect all participants to the current meeting.

Ad hoc participants (participants not on the original invited list) are removed from the meeting if they disconnect.

CHANGING THE MEETING VIEW FOR A PARTICIPANT



While a meeting is in progress, you can change the meeting view for a single selected participant or for all participants simultaneously.

Procedure

- 1 On the **Participant List** tab, select the participant for whom you want to change the view.
If you do not select a participant, the view changes for all participants.
 - 2 On the toolbar, click **Change view to all participants**.
 - 3 In the **Change participants view** window, from the **Change to view** list, select a view for the participant.
To select multiple participants, click the participants while holding down the Ctrl or Shift key.
 - 4 Click **OK**.
-

INVITING A SUB-CONFERENCE

You can divert selected participants in the **Participant List** of the current conference to attend a new or currently running private audio sub-conference. Sub-conference participants are hidden in the video layout.



Procedure

- 1 In the **Participant List** tab, select the participant(s) whom you wish to invite to a sub-conference.
- 2 Click **Sub-conference** on the toolbar.
- 3 In the Select sub-conference window, from the list, select a sub-conference you want to which you want to invite participants.
- 4 Click **OK**.

A maximum of three sub-conferences can be supported per meeting. The number of supported sub-conferences depends on the meeting-type configuration.

EXTENDING MEETING DURATION

You can extend the meeting duration while a meeting is in progress.



Procedure

- 1 Click **Extend Conference Duration** on the toolbar.
 - 2 In the **Extend** window, in the **Extend** field, enter the number of minutes by which you want to extend the duration of the meeting.
To select multiple participants, click the participants while holding down the Ctrl or Shift key.
 - 3 Click **OK**.
-

TERMINATING A MEETING

You can immediately terminate a meeting at any time.



Procedure

- 1 Click **Terminate Meeting** on the toolbar.
 - 2 Click **OK**.
-

DEFINING VIDEO LAYOUT AND DISPLAY

The Layout panel allows meeting controllers to spontaneously control and adjust all aspects of meeting video. When first accessed, this area displays the video layout as selected during meeting scheduling. From this view, the meeting controller can do the following:



Procedure

- 1 Access the Layout panel
In Continuous Presence Mode, you can view which terminals are set for which video frames.
 - 2 To rearrange the video layout per terminal, drag-and-drop participating terminal names from the Participant List tab in the Main Panel into the desired frame.
 - 3 Set voice activated sub-frames.
-

DEFINING VIDEO OUTPUT SCHEMES

This feature is only available for conferences occurring on RADVISION MCU products running version 4.x software. When enabled, the video output schemes display up to four available video layouts. The system can produce up to four different video layouts per meeting to cater for participants with different video support capabilities, or different viewing purposes.

Multiple meeting views are configured per service with settings that specify video layout, layout switching and participant layout-switching behavior, picture resolution, bandwidth settings, frame rate, and video format.

Multiple meeting views enable the speaker in a lecture to view the participants while the participants view the speaker. In a meeting with varying connection speeds, participants with high video capabilities and participants with low video capabilities can take part at the same time without one affecting the experience of the other.



Procedure

- 1 In the **Video Display** area, click **Output Scheme Settings**.
 - 2 In the **Video Scheme Settings** window, in the **Bandwidth** column, enter the bandwidth for each video scheme.
 - 3 Click **OK**.
-

ACTIVATING AND DEACTIVATING AUTO-SWITCHING

Auto-switching mode displays all the participants of a large meeting on a rotating basis when **Continuous Presence** mode is selected in the video layout. Participant images can be replaced at preset intervals either in batches or one by one by way of a queue system.

You can activate or deactivate auto-switching at any time.

Note Auto-switching overrides any existing video display options.



Procedure

- 1 In the **Video Display** area, click **Auto-switch**.
 - 2 In the **Auto-switch interval** window, in the relevant field, enter an auto-switching interval value, between 10 and 108 000 seconds (30 minutes).
 - 3 Click **OK**.
Video from participating terminals (randomly selected) appears on all other terminals at the defined interval.
 - 4 To disable auto-switching, click **Auto-switch**.
-

DISPLAYING A PARTICIPANT OR TERMINAL NAME

You can display a participant or endpoint (terminal) name in a specific position within the video layout frame.

iCM supports text overlay on participant images when there is MVP support and the text overlay option is configured for the meeting type.



Procedure

- 1 Access the Video Display area.
- 2 Click **Display Participant Name in Frame**.

Each participant or endpoint is clearly identified by name, in a text overlay on the video image.

The image of the active speaker is indicated by a border.

SETTING A VOICE-ACTIVATED FRAME

Available only for views for which a sub-frame is configured.



Procedure

- 1 Access the Video Display area.
 - 2 Drag the **Active Speaker** button into the required position within the video layout frame.
-

ENABLING AND DISABLING DYNAMIC LAYOUT

Without a dynamic layout, you can switch between a wide range of video layouts for the meeting. With dynamic layout, the video image automatically includes the number of frames equal to the number of participant images (up to a maximum of 16). The layout changes according to the number of participants that join or exit the meeting.

Dynamic layout conserves bandwidth, eliminates the display of empty frames in the video image, and makes optimal use of the video image display. Dynamic layout is especially suited to a meeting that has a high rate of participant traffic joining and exiting the meeting, or to an adaptive meeting type that has a variety of meeting sizes.



Procedure

- 1 Access the Video Display area.
 - 2 Click **Dynamic Layout** to enable a dynamic layout.
 - 3 Click **Dynamic Layout** again to disable the dynamic layout.
When Dynamic Layout is selected, Change Layout is disabled.
-

CHANGING LAYOUT

With Dynamic Layout disabled, you can select a specific layout from a list of all available layouts in this MCU service and set that specific layout as the current layout for a view.



Procedure

- 1 Access the Video Display area.
 - 2 Click **Change Layout**.
 - 3 In the Select Layout window, select a layout from the options in the Select Layout window.
 - 4 Drag and drop the option in the selected layout area in the Video Display area.
-

INVITING MULTIPLE PARTICIPANTS

To invite multiple participants to a meeting, simultaneously, use the following procedure:



Procedure

- 1 On the **Advanced Invitation** tab, click **User**.
- 2 Select the attendees to invite from the **Users: in Groups** list.
If required, you can search for users by entering the full name or part thereof in the search field, and clicking the search icon.
- 3 Click the right arrow to include these users in the list to be invited.
- 4 In the **Kbps** field, select the bit rate to be used when inviting a participant to a meeting. Use the default setting for optimal bit rate performance.

- 5 If required, click **Advanced** and then select a layout option from the **view** list.
Your selection presets the position of the invited participant image in the video layout upon the participant's entry into the meeting.
 - 6 Drag the **Lock Image** icon into the preferred position in the **Layout Display Frame** displayed on the right side of the **Advanced Invitation** tab.
You can specify a position for the participant image in all layouts currently supported in the meeting.
 - 7 To send the invitation, click **Invite**.
-

INVITING MULTIPLE TERMINALS

Use the following procedure to invite multiple terminals to a meeting:



Procedure

- 1 On the **Advanced Invitation** tab, click **Terminal**.
- 2 Select the terminals to include in the meeting.
If required, you can search for terminals by entering the full name or part thereof in the search field, and clicking the search icon.
- 3 To include the selected terminals in the list of invited terminals, click the right-pointing arrow.
- 4 In the **Kbps** field, select the bit rate to be used when inviting a terminal to a meeting.
Use the default setting for optimal bit rate performance.
- 5 If required, click **Advanced** and then select a layout option from the **view** list.
This presets the position of the invited terminal image in the video layout, upon entry of a participant into the meeting.
- 6 Drag the **Lock Image** icon into the preferred position in the **Layout Display Frame** located on the right side of the **Advanced Invitation** tab.
You can specify a position for the participant image in all layouts currently supported in the meeting.

- 7 To send the invitation, click **Invite**.
-

VIEWING PARTICIPANT DETAILS

On the Participant List tab, all participants currently invited to a meeting are listed. The Participant List tab enables you to view meeting participant details including media connection types and available video layouts for the meeting. You can view the details in an alphabetical list or according to cascaded connections.

The following information about each participant or terminal is included

- **Status**—Indicates participant status.
 - To sort by status, click the column heading.
 - Orange status indicates the participant is connecting.
 - Green status indicates that the participant is connected.
 - Red—Participant is disconnected.
 - Disconnected participants remain in the Participant List for the duration of the meeting.
 - To reconnect a disconnected participant, click the red status icon.
 - No status indicator indicates that there are no meeting participants.
- **Name**—Displays the participant name.
- **Number**—Displays the endpoint number of the meeting participant.
- **Dial-in**—Indicates whether the terminal dialed into the meeting or was invited to the meeting from the Conference Control screen.
- **Sub-conf.**—Diverts selected participants in the current meeting to a new meeting or to a private audio meeting that is currently in progress. This option only appears when sub-conferences are in progress during a meeting. For more information, see the [Inviting a Sub-conference](#) section on page 48.
- **Location in View**—Indicates the meeting view being used for a current participant. When a meeting is configured with more than one view, select from the list of available views to modify a view for the selected participant.
- **Media Icons**—Indicate participant equipment and capacities, such as microphone, loudspeaker, monitor, camera, and data collaboration. The icons are enabled for users with chair-control permission related to the media type status for a selected participant.

CHANGING A PARTICIPANT NAME



Procedure

- 1 Click **Participant List**.
 - 2 Click the **Change Participant Name** icon located next to the name of the participant to open a popup window.
 - 3 Enter a new name for that participant in the popup window.
If the participant is online, the new name is displayed on the video screen for that participant.
-

MUTING OR ENABLING A SELECTED MICROPHONE



Procedure

This option is useful in cases when there is unwanted background noise related to a specific participant or terminal.

- 1 Click **Participant List**.
 - 2 Click the **Mic. Enabled** icon next to the required participant name.
 - 3 Alternatively, change the volume of that participant by right clicking the triangle next to the microphone icon to open a popup screen.
 - 4 In the popup screen, set the volume to be between -5 to +5.
-

MUTING OR ENABLING A SELECTED LOUDSPEAKER



Procedure

- 1 Click **Participant List**.
 - 2 To mute or enable a specific participant loudspeaker, click the **Loudspeaker Enabled** icon next to the required participant name.
-

ENABLING A SELECTED MONITOR



Procedure

- 1 Click **Participant List**.
 - 2 Click the **Monitor Enabled** icon next to the required participant name.
-

BLOCKING OR UNBLOCKING A SELECTED CAMERA



Procedure

You can block or unblock a video stream sent by a meeting participant. For example, if a participant's video connection affects meeting processing and degrades performance, you can block the participant's video connection until endpoint issues are resolved.

- 1 Click **Participant List**.
 - 2 Click the **Camera Enabled** icon next to the required participant name.
-

ENABLING DATA COLLABORATION



Procedure

You can enable data collaboration if the terminal of the participant supports T.120 data sharing.

- 1 Click **Participant List**.
 - 2 Click the **Data Collaboration Enabled** icon next to the required participant name.
-

REMOVING A PARTICIPANT FROM THE PARTICIPANT LIST



Procedure

- 1 Click **Participant List**.
- 2 Select the participant(s) you want to disconnect and remove from the list.
- 3 Click **Delete Participant** on the toolbar.

The participant(s) are disconnected from the meeting and removed from the list.

How to Moderate a Meeting

5

MANAGING YOUR ICM ADDRESS BOOK

The address book facility allows you to store a list of personal and organization contacts that you can quickly retrieve when scheduling meetings. Only you can view your personal contacts. All organization users can view your organization contacts.

You can also define contact groups to divide users into groups for easier management and quicker access.

- [How to Manage Your Personal Contacts List](#) on page 59
- [How to Manage Your Organization Contacts List](#) on page 62
- [How to Manage Contact Groups](#) on page 63

- [Creating or Modifying a Personal Contact](#) on page 59
- [Removing a Personal Contact](#) on page 61
- [Searching for a Personal Contact](#) on page 61

HOW TO MANAGE YOUR PERSONAL CONTACTS LIST

CREATING OR MODIFYING A PERSONAL CONTACT



The Address Book section is hidden by default. If you cannot see this section, contact your system administrator.

Procedure

- 1 Click **Address Book** in the sidebar menu.
- 2 Click **Private**.
- 3 Click the link in the Name column for the contact you require, or click **Add** to create a new contact profile.

How to Manage Your Personal Contacts List

- 4 Enter the first name, last name and e-mail address of the contact in the relevant fields.
If you provide a phone number for the contact, you do not have to enter an e-mail address in the E-mail field.
- 5 Select a terminal type used by the contact.
Available fields and options vary according to terminal type.
- 6 If you select the IP (H.323) terminal type:
 - Enter the E.164 number or IP address of the new terminal in the **IP Phone Number** field.
 - Select the maximum speed for the terminal connection to the network for video meeting in the **Bandwidth** field.
- 7 If you select the PSTN/ISDN terminal type:
 - Enter the international access code for the ISDN terminal in the **Country Code** field.
 - Enter the local area code of the ISDN terminal in the **Area Code** field. If the local area code begins with 0, do not include the 0 in the area code.
 - Enter an ISDN phone number in the **Number** field.
 - Select the maximum speed for the terminal connection to the network for video meeting in the **Bandwidth** field.
 - Select **Restricted Mode** to apply the convention of using multiples of 56 Kbps instead of multiples of 64 Kbps.
- 8 If you select the Dual (H.320 and H.323) terminal type:
 - Enter the E.164 number or IP address of the new terminal in the **IP Phone Number** field.
 - Enter the international access code for the ISDN terminal in the **Country Code** field.
 - Enter the local area code of the ISDN terminal in the **Area Code** field. If the local area code begins with 0, do not include the 0 in the area code.
 - Enter an ISDN phone number in the **Number** field.
 - Select the maximum speed for the IP terminal connection to the network for video meeting in the **IP Bandwidth** field.
 - Select the maximum speed for the ISDN terminal connection to the network for video meeting in the **ISDN Bandwidth** field.

- Select **Restricted Mode** to apply the convention of using multiples of 56 Kbps instead of multiples of 64 Kbps.
 - 9 If you select the IP (SIP) terminal type, provide the following information:
 - Enter a SIP URI for the user.
 - Select the maximum speed for the terminal connection to the network for video meeting in the **Bandwidth** field.
 - 10 Click **Group** to associate a contact with a group defined under Address Book > My Groups.
 - 11 Click **Select Groups** and use the arrow buttons to move entries between the Available Groups and Selected Groups lists.
 - 12 Click **OK** to save your changes.
The contact appears in the relevant group list and is added to your personal address book.
-

REMOVING A PERSONAL CONTACT



Procedure

- 1 Click **Address Book** in the sidebar menu.
 - 2 Click **Private**.
 - 3 Select the check box next to the name of the contact you want to delete.
 - 4 Click **Delete** and then **OK**.
The contact is permanently deleted from your address book.
-

SEARCHING FOR A PERSONAL CONTACT



Procedure

- 1 Click **Address Book** in the sidebar menu.
- 2 Click **Private**.
- 3 Enter the partial or complete name of the contact in the **Name** field.

- 4 From the **In Groups** list, select **All Groups** or a group in which to search for the contact.
The groups displayed in this list are defined at Address Book > My Groups.
 - 5 Click **Search**.
Search results are listed.
 - 6 To return to the complete list of contacts, clear the Name field, and then click **Search**.
-

HOW TO MANAGE YOUR ORGANIZATION CONTACTS LIST

- [Viewing All Users in Your Organization](#) on page 62
- [Searching for a Contact in Your Organization](#) on page 62
- [Adding an Organization Contact to your Personal Address Book](#) on page 63

VIEWING ALL USERS IN YOUR ORGANIZATION



Procedure

- 1 Click **Address Book** in the sidebar menu.
 - 2 Click **Public**.
-

SEARCHING FOR A CONTACT IN YOUR ORGANIZATION



Procedure

- 1 Click **Address Book** in the sidebar menu.
- 2 Click **Public**.
- 3 Enter the partial or complete name of the contact in the **Name** field.
- 4 From the **In Groups** list, select **All Groups** or a group in which to search for the contact.

- 5 Click **Search**.
Search results are listed.
 - 6 To return to the complete list of contacts, clear the Name field, and then click **Search**.
-

ADDING AN ORGANIZATION CONTACT TO YOUR PERSONAL ADDRESS BOOK



You cannot edit a public contact record. You can add a public contact to your personal address book.

Procedure

- 1 Click **Address Book** in the sidebar menu.
 - 2 Click **Public**.
 - 1 Select the check box next to the name of the contact you want to add to your personal address book.
 - 2 Click **Add to Private**.
The **Private** tab opens and the contact appears in the list.
-

HOW TO MANAGE CONTACT GROUPS

- [Creating or Modifying a Group](#) on page 63
- [Removing a Group](#) on page 64
- [Searching for a Group](#) on page 64

CREATING OR MODIFYING A GROUP



Procedure

- 1 Click **Address Book** in the sidebar menu.
- 2 Click **My Groups**.
- 3 Click the link in the Name column for the group you require, or click **Add** to create a new contact profile.
- 4 Enter a name for the group and use the arrow buttons to move entries between the Available Contacts and Selected Contacts lists.

- 5 Click **OK**.

The group appears in the My Groups tab. All selected contacts are included in the group.

The In Groups list on the Private and Public tabs includes the new group.

REMOVING A GROUP



Procedure

- 1 Click **Address Book** in the sidebar menu.
- 2 Click **My Groups**.
- 3 Select the check box next to the name of the group you want to delete.
- 4 Click **Delete** and then **OK**.

The group is permanently deleted from your address book.

SEARCHING FOR A GROUP



Procedure

- 1 Click **Address Book** in the sidebar menu.
 - 2 Click **My Groups**.
 - 3 Enter the partial or complete name of the group in the **Name** field.
 - 4 Click **Search**.
Search results are listed.
 - 5 To return to the complete list of groups, clear the Name field, and then click **Search**.
-

6

MANAGING YOUR ICM USER PROFILE

- [Viewing Your User Profile Settings](#) on page 66
- [Modifying Your Password](#) on page 66
- [Modifying Your E-mail Address](#) on page 66
- [Modifying Your Time Zone](#) on page 67
- [Defining Your Meeting Display Preferences](#) on page 67
- [Defining Your Virtual Room Preferences](#) on page 68

VIEWING YOUR USER PROFILE SETTINGS



Procedure

- 1 Click **My Profile** in the sidebar menu.
 - 2 Click **My Info**.
 - 3 Click **Advanced** to display further information.
-

MODIFYING YOUR PASSWORD



Procedure

- 1 Click **My Profile** in the sidebar menu.
 - 2 Click **My Info**.
 - 3 Click **Modify Password**.
 - 4 Complete the information as required and click **OK** to save your changes.
-

If your profile settings are stored on an external directory server, you cannot modify your password.

MODIFYING YOUR E-MAIL ADDRESS



Procedure

- 1 Click **My Profile** in the sidebar menu.
 - 2 Click **My Info**.
 - 3 Modify your e-mail address as required.
 - 4 Click **OK** to save your changes.
-

If your profile settings are stored on an external directory server, you cannot modify your e-mail address.

MODIFYING YOUR TIME ZONE



Procedure

- 1 Click **My Profile** in the sidebar menu.
 - 2 Click **My Info**.
 - 3 Click **Advanced**.
 - 4 Select the required time zone.
 - 5 Click **OK** to save your changes.
-

DEFINING YOUR MEETING DISPLAY PREFERENCES



Procedure

- 1 Click **My Profile** in the sidebar menu.
- 2 Click **My Preferences**.
- 3 Select a default virtual room from the drop-down list.
The default virtual room is automatically selected when you schedule a meeting from the iVIEW Suite web interface.
For LDAP users, the virtual rooms created during LDAP synchronization are automatically set as the default virtual room.
- 4 Select **Don't include me in the meeting** if you do not want to be automatically included in the Selected Participants list on the Invite tab when you schedule a new meeting.
- 5 Enter a value in **Delete meeting history items older than n days** to delete meetings from My Meetings > History after the specified number of days.
- 6 Select **Use Full Screen Display** to display meetings without a menu or title bar in your browser.
Deselect to display meetings using default browser settings.
- 7 Select an option from the **Name Display Format** list to change the way your name is displayed in meeting-related information and in the meeting video display.

- 8 Select **Last name** or **First name** from the **Sort by** list to change the sort order for participant name columns in the User interface.
 - 9 Select an option from the **Date Display Format** list to change the way dates are displayed in the User interface.
 - 10 Click **OK** to save your changes.
-

DEFINING YOUR VIRTUAL ROOM PREFERENCES



Procedure

- 1 Click **My Profile** in the sidebar menu.
- 2 Click **My Info**.
- 3 Click **Virtual Room Setting**.

Meeting Operators can define multiple virtual rooms.
Meeting Organizers can define only one virtual room and can configure only basic information such as meeting type and meeting PIN.
- 4 Enter a virtual room number and name in the relevant fields.

The virtual room and should be unique in the system.
The virtual room number is generated automatically and is not editable if the administrator has downloaded user profile information from the LDAP server.
- 5 Select a meeting type.
 - Non Video Conference—Only users and meeting rooms are scheduled for a meeting. No terminals are involved.
 - Point to Point meeting type—Only two terminals are scheduled for a meeting and there is no use of MCU ports for the meeting. This feature is only available if advanced call control is enabled on the Enhanced Communication Server profile.
 - Audio Only—Forces the conference to be audio-only.
 - Desktop Video—Supports transcoding at bandwidth rates of up to 384 Kbps.

- ❑ HD/SD Continuous Presence—Supports transcoding at bandwidth rates of up to 4096 Kbps. Supports high definition continuous presence. Supports image size of up to 720p. Default when adding a new service.
- ❑ HD Switched Video—Supports switched high definition video at rates of up to 4096 Kbps.

Note Continuous Presence or Voice Activated meeting types are available only if a Sony endpoint with an embedded MCU is defined in the system. To host the meeting on the embedded MCU, you must be one of the meeting attendees and select a Sony endpoint with an embedded MCU.

- 6 (Optional) Define the meeting access PIN in the **Meeting PIN** field.
Only integers are allowed. This PIN allows you to join a PIN-protected meeting.
- 7 (Optional) Define the PIN that allows a user to perform moderation operations on a meeting in the **Moderator PIN** field.
Only integers are allowed. This PIN allows you to take control of a meeting from the In-meeting Control interface or from the endpoint using DTMF. Administrators and Meeting Operators can access the In-meeting Control screen without using the Moderator PIN.
- 8 (Optional) If you entered a moderator PIN, you can turn on the waiting room functionality by checking **Place participants in a 'waiting room' until the moderator joins the meeting**.
Before the host joins the meeting, all connected participants are put into waiting room mode where they cannot hear or see one another. When the host terminal joins the meeting, the waiting room mode is removed and all participants can see and hear each other.
You can unlock the waiting room mode by taking control of the In-meeting Control screen after entering the moderator PIN and clicking **Unlock waiting room**.
- 9 (Optional) If you entered a moderator PIN, you may automatically record a meeting when it starts by selecting **Try to record meeting when meeting starts** (available only when a SCOPIA Desktop Server is configured in iVIEW Suite).

- 10** For meetings enabled for SCOPIA Desktop attendance, you can specify whether the meeting will allow streaming by selecting the default streaming mode.

The default streaming mode determines the initial streaming state. Streaming can be disabled or enabled during the meeting by any SCOPIA Desktop Client that has meeting moderation rights.

By default, the Default Streaming Mode field is disabled and hidden from the user interface. If you need this field enabled, contact your system administrator.

- 11** (Optional) Enter a description of the scheduled meeting for future reference.

The Description field is hidden by default. If you need this field displayed, contact your system administrator.

INDEX

A

auto-switching 50
 Auto-switch interval 50

B

billing 18
built-in meetings 22

C

camera
 blocking 56
columns
 sorting 68
Continuous Presence meeting type 5, 22, 69
Continuous Presence Mode 49

D

data collaboration 56
date
 display format 68
Dynamic Layout
 enabling and disabling 51

E

E.164 number 60
Endpoint-initiated meeting
 Sony endpoint with embedded MCU 26

H

host 18

I

icons
 media 54
IP (H.323) 60
IP phone number 60

L

layout
 changing 14, 52
 dynamic 51
locking
 image 53
loudspeakers
 muting and enabling 55

M

media icons 54
Meeting Organizer
 permissions 2
Meeting types
 built-in 22
My Meetings
 Status indicators 30

N

Name Display Format 67
Non Video Conference meeting type 5, 22,
 68

P

Participant List tab 54

- password
 - modifying 66
- Point to Point meeting type 5, 22, 68

R

- Reference Code 18
- Regular User
 - permissions 2
- report
 - information categories 32
- reports
 - generating 32

S

- sub-conference 48

T

- terminal
 - custom 12

U

- user types 1
 - default permissions 2
 - Meeting Organizer 2
 - Regular User 2
 - user interface 2

V

- video frame 49
- Video Layout and Display area 49
- video output
 - schemes 49
- Voice Activated meeting type 5, 22, 69